



at&t



Proud Sponsor

Quick start guide

CL4939

**Big button big display
telephone/answering
system with caller ID/
call waiting**




This quick start guide provides basic instructions. For additional installation options and complete instructions that enable you to use all features of this telephone, refer to your AT&T CL4939 big button big display telephone user's manual.

Telephone installation


If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

Follow the steps below to install the telephone.

1. Plug one end of the coiled handset cord into the handset jack on the left side of the telephone base. Plug the other end into the handset and hang up.

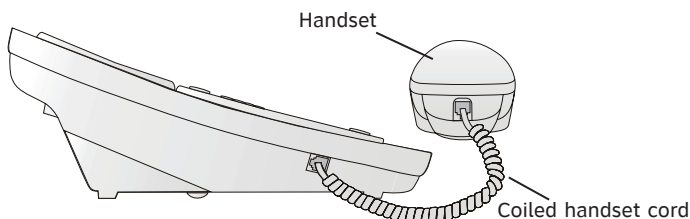


2. Plug one end of the telephone line cord into the **TEL LINE** jack on the back of the telephone base. Plug the other end of the telephone line cord into a telephone wall jack.
3. Plug the small end of the power adapter into the **POWER** jack on the back of the telephone base. Plug the large end into a standard electrical outlet not controlled by a wall switch.

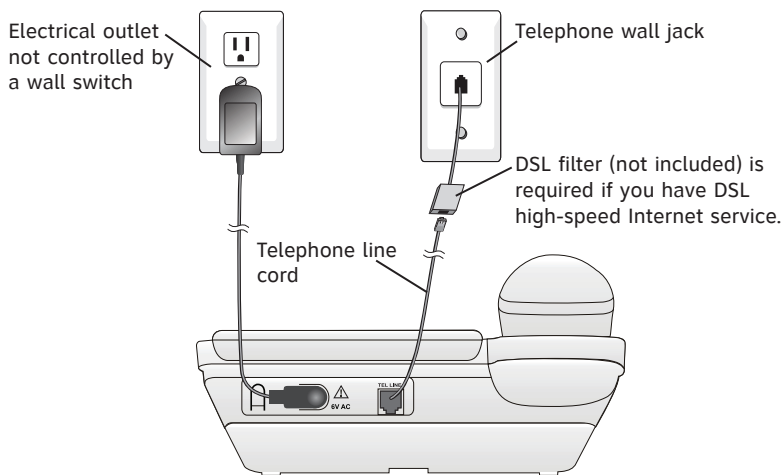

Telephone installation

4. Lift the handset or press **◀▶SPEAKER** to check for a dial tone.
5. Rotate the top of the display up or down to adjust the angle of the screen for maximum visibility.

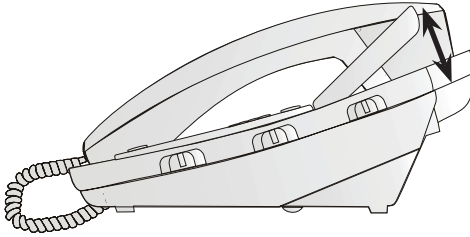

iNOTES:

- Use only the power adapter provided with this product. To obtain a replacement, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- You can use this telephone without the power adapter installed. In this case, the telephone works only to make or answer calls with the handset, or adjust the ringer volume or handset listening volume. For optimal performance, power your telephone with the supplied power adapter.

Quick reference guide

REMOVE

While reviewing the call history entries, press and hold to clear the call history.

While reviewing an entry stored in the directory or call history entries, press to delete.

While entering names (or numbers), press to backspace and erase a character (or digit).

DISPLAY DIAL

Press to dial the number currently displayed.


MEM

Press to access two-touch memory.

FLASH

During a call, press to answer an incoming call if you subscribe to call waiting service provided by your telephone service provider.

Press to cancel an operation and return to idle mode.

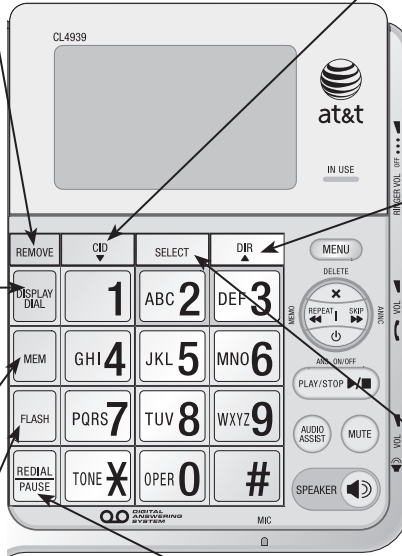

CID/▼

Press to display the call history.

While using the menu, press to scroll through the settings.

While reviewing the directory or call history, press to scroll down.

DIR/▲

Press to enter the directory.

While using the menu, press to scroll through the settings.

While reviewing the directory or call history, press to scroll up.

SELECT

While using the menu, press to save the setting and move to the next menu option.

While reviewing the call history, press to show dialing formats.

REDIAL/PAUSE

While using the handset or speakerphone, press to dial the last number dialed.

While editing numbers in the two-touch memory or directory, press to copy the last number dialed.

While entering numbers, press to insert a four-second dialing pause.

Quick reference guide

MENU

Press to enter the menu.

While reviewing the call history, press to store the displayed name and number in the directory.

MUTE

During a call, press to mute the handset or speakerphone microphone. Press again to resume your conversation.

AUDIO ASSIST™

Some voices will sound louder and clearer if you press **AUDIO ASSIST** while you are on a call using the handset.

SPEAKER

Press to turn on the base speakerphone. Press again to end the call.

RINGER VOL switch

Slide to adjust the ringer volume.


VOL switch

Slide to adjust the listening volume on the handset.

VOL switch

Slide to adjust the listening volume on the speakerphone.

While playing back messages, slide to adjust the playback volume.

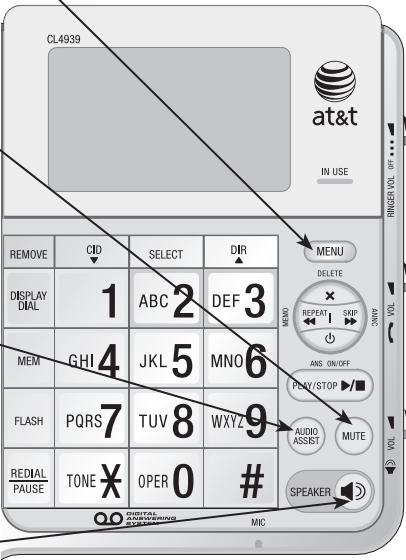

REPEAT/MEMO

While the telephone is playing the day and time the current message was received, press to go back to the previous message.

After the telephone plays the day and time the current message was received, press to repeat the current message.

When the telephone is idle, press to record a memo.

ANS ON/OFF

Press to turn the answering system on or off.

DELETE


Press to delete the message currently playing.

Press twice to delete all old messages when the telephone is not in use.

SKIP/ANNC

Press to skip to the next message.

Press to record or review the outgoing announcement.

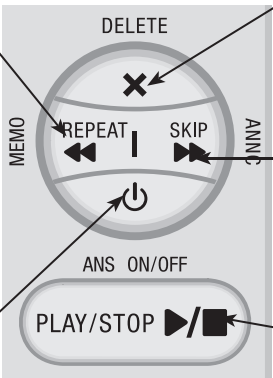


PLAY/STOP

Press to start or stop message playback.

Press to stop recording.

Indicator lights and tones

Indicator lights

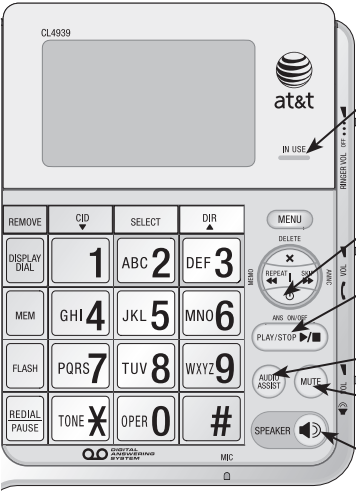

IN USE

On when the line is in use or the answering system is answering a call.
Flashes when the telephone is ringing.

ANS ON/OFF

On when the answering system is on.

PLAY/STOP

Flashes when there are new (unreviewed) messages.

AUDIO ASSIST

On when the audio assistance feature is in use.

MUTE

On when the microphone is muted.

SPEAKER


On when the speakerphone is in use.

Alert tones

Beep (Key tone)	A key is pressed.
Beeeep (One short tone)	Command of the answering system is completed successfully.
Beeeeeeeep (One long beep)	The answering system begins to record an announcement or a memo.
Three short high-pitched beeps (Confirmation tone)	Command is completed successfully.
One long low-pitched beep (Error tone)	• Command has failed. • The number you entered in the directory or two-touch memory is over 24 digits. • The name you entered in the directory is over 15 characters. • There are no telephone numbers stored in the directory. • You have reached the end of the directory records. • There are no call history entries. • You have reached the end of the call history entries. • There is no telephone number in the call history entry you dialed. • There is no telephone number in the call history entry you saved in the directory or two-touch memory.
Beep-beep every 15 seconds (Message alert tone)	There are new messages.
Four high- then low-pitched beeps (Priority call tone)	The incoming call is a priority call.


Screen messages

Screen icons

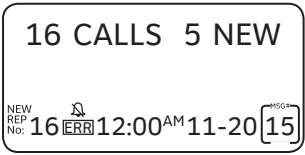

NEW	The displayed call history entry is unreviewed.
REP	You have received more than one call from this number.
No:16	The position of the number stored in the call history.
	The ring is turned off.
ERR	There is an error in the caller ID information.

Message window displays

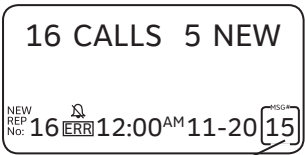

Message window

The message window usually displays the total number of messages. See the table below for explanations of other displays in this window.

(blank)	The answering system is off.
--	The answering system is answering a call. -OR- The answering system is being accessed remotely.
0	No messages.
1-99	Total number of messages and memos. During playback, the number of the message.
0-59 (counting)	Elapsed time while recording a memo.
A	You have accessed the announcement menu.
AP	The announcement you recorded is playing.
dE	All old messages are deleted, the message currently playing is deleted, or the announcement currently playing is deleted.
F	The answering machine memory is full. Delete some messages to make room for more.

Screen messages

Display screen messages

DELETED	All the entries stored in the call history have been deleted. -OR- The directory or two-touch memory entry has been deleted.
DIRECTORY EMPTY	There are no telephone numbers stored in the directory.
CALL LOG EMPTY	There are no call history entries.
END OF LIST	You have reached the end of the call history records.
LINE IN USE	Another telephone on the same line is in use. -OR- No telephone line cord is connected to the telephone.
RINGING	There is an incoming call.
NO AC POWER	There is no AC power. Check the power adapter connection to the telephone and the electrical wall outlet.
MEMORY FULL	The directory is full.
ONLY 15 ALLOWED	The name you entered in the directory is over 15 characters.
ONLY 24 ALLOWED	The number you entered in the directory or two-touch memory is over 24 digits.
SET CLOCK	The clock needs to be set.
STORED	The entry is saved in the directory or two-touch memory location successfully.
XX CALLS YY NEW	There are XX calls in the call history and YY of them are new (missed and unreviewed).

Making and answering a call

Using handset

To make a call:

- Lift the handset, wait for the dial tone, and then dial a number.

To answer a call:

- Lift the handset.

To end a call while using the handset:

- Place the handset in the telephone base.

Using speakerphone

To make a call:

- Press **SPEAKER** then dial a number.

To answer a call:

- Press **SPEAKER**.

To end a call while using the speakerphone:

- Press **SPEAKER**.

On-hook dialing (pre-dialing)

1. Use the dial pad keys to enter a telephone number.
 - Press **REDIAL/PAUSE** to insert a four-second dialing pause.
 - Press **REMOVE** to make corrections.
 - Press **FLASH** to return to idle mode.
2. Lift the handset to call.
-OR-
Press **DISPLAY DIAL** or **SPEAKER** to call using the speakerphone.



Switching between handset and speakerphone

To switch from handset to speakerphone during a call:

- Press **SPEAKER** then place the handset in the telephone base.

To switch from speakerphone to handset during a call:

- Lift the handset.

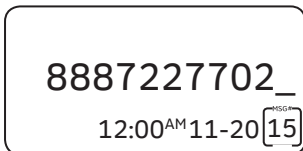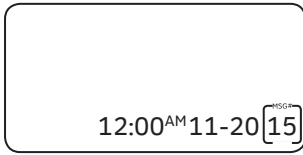

Answering system setup



To turn on the answering system

To turn the answering machine on and answer calls:

- Press **ANS ON/OFF** repeatedly until the system announces “*Answering machine is on.*” The **ANS ON/OFF** light is on.

To record your outgoing announcement

The outgoing announcement is the message callers hear when calls are answered by the answering system.

If the answering system is on, the telephone automatically answers calls with “*Hello, please leave a message after the tone.*” You can use this announcement, or replace it with a recording of your own.



RECORD

12:00AM 11-20 [A]

USE STOP TO END

12:00AM 11-20 [A]

USE STOP TO END

12:00AM 11-20 [AP]

Use the following steps to record an outgoing announcement with a recording of your own.

1. Press **SKIP/ANNC**. The screen shows **RECORD** and the message window displays **A**.
2. Press **SELECT**. The screen shows **USE STOP TO END** with a long beep.
3. Speak towards the microphone (**MIC**) on the telephone and maintain a distance of about nine inches. You can record an announcement for up to two minutes. Announcements shorter than one second are not recorded.
4. Press **PLAY/STOP▶/■** to end the recording. The recorded announcement automatically plays back and then the telephone automatically returns to idle mode with a beep.



Proud Sponsor

www.telephones.att.com

Audio assist™ and Message guard™ are trademarks of Advanced American Telephones.

© 2009 Advanced American Telephones. All Rights Reserved.

AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to
Advanced American Telephones, San Antonio, TX 78219.

Printed in China. Issue 4 AT&T 09/09.